20 MHz - 1.8 GHz LOW NOISE WIDE BAND LIMITER AMPLIFIER

Key Features



- 50 Ohm Impedance
- 20 MHz ~ 1.6 GHz
- 0.9 dB Noise Figure
- 36.0 dBm Output IP₃
- 27.0 dB Gain
- +/-0.5 dB Gain Flatness
- 21.0 dBm P_{1dB}
- 1.5:1 VSWR
- 30 dBm Max CW RF P_{IN}
- >34 Years MTBF
- Unconditional Stable
- RoHS Compliant

Product Description



WLLA0020A is integrated with WanTcom proprietary low noise amplifier technology, high frequency micro electronic assembly techniques, and high reliability design to realize optimum low noise figure, wide bandwidth, high linearity, and unconditional stable performances together. With single DC voltage operation, the amplifier has optimal input and output matching in the specified frequency range at 50-Ohm impedance system. The amplifier has standard SMA connectorized WP-5 Gold plated housing.

The amplifier is designed to meet the rugged standard of MIL-STD-202g.

Applications

- Mobile Infrastructures
- GPS
- Astronomy
- Defense
- Security System
- Measurement
- Fixed Wireless



Specifications

Summary of the electrical specifications WLLA0020A at room temperature


Index	Testing Item	Symbol	Test Constraints		Nom	Max	Unit
1	Gain	S ₂₁	20 MHz – 1.8 GHz		27	29	dB
2	Gain Variation	ΔG	20 MHz – 1.8 GHz		+/- 0.5	+/-1.0	dB
3	Input VSWR	SWR₁	20 MHz – 1.8 GHz		1.5:1	1.8:1	Ratio
4	Output VSWR	SWR ₂	20 MHz – 1.8 GHz		1.5:1	1.8:1	Ratio
5	Reverse Isolation	S ₁₂	20 MHz – 1.8 GHz		45		dB
6	Noise Figure	NF	100 MHz – 1.8 GHz		0.9	1.2	dB
7	Output 1dB Gain Compression Point	P _{1dB}	20 MHz – 1.8 GHz	19	21		dBm
8	Output Third Order Interception Point	IP ₃	Two-tone, P _{out} =+0 dBm each, 1 MHz sep.	30	36		dBm
9	Current Consumption	I _{dd}	$V_{ds} = 5.0V$		180		mA
10	Power Supply Voltage	V_{dd}		+4.7	+5	+5.3	V
11	Thermal Resistance, Junction to Case	R _{th,c}	Last stage transistor V _{ds} = 5.0V, I _{ds} = 150 mA,			32	°C/W
12	Operating Temperature	To		-40		+85	°C
13	Maximum Input CW RF Power	P _{IN, MAX}	DC – 6 GHz			30	dBm

Absolute Maximum Ratings

Parameters	Units	Ratings
DC Power Supply Voltage	V	-0.5, +6V
Drain Current	mA	250
Total Power Dissipation	mW	1200
Input CW RF Power	dBm	30
Channel Temperature	°C	150
Storage Temperature	°C	-55 ~ 125
Operating Temperature	°C	-40 ~ 85
Thermal Resistance	°C/W	32

Operation of this device above any one of these parameters may cause permanent damage.

Functional Block Diagram

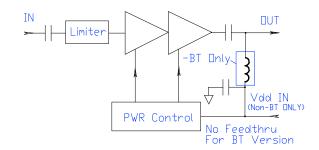

Ordering Information

DC Voltage	Without Output Bias-T	With Output Bias-T		
$V_{dd} = +5.0 \text{ V}$	WLLA0020A	WLLA0020ABT		

Typical Data

Preliminary


Outline, WP-5 Housing


UNITS: INCH [mm]

BODY: **Brass** Gold Plating Finish: RF Connector: SMA F Gold

V_{dd} PWR: Feed through

WLLA14-3535C/D

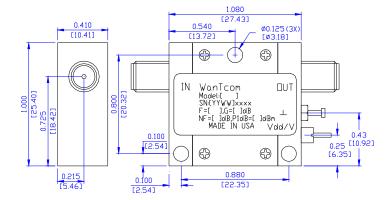

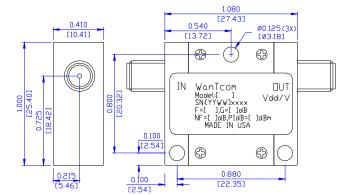

WLLA14-3535C/DBT

Application Notes:

A. SMA Torque Wrench Selection

Always use a torque wrench with 5 ~ 6 inch-lb coupling torque setting for mating the SMA cables to the amplifier. Never use torque more than 8 inch-lb wrench for tightening the mating cable to the connectors. Otherwise, the permanent damage will occur to the SMA connectors of the amplifier. 8710-1582 (5 inch-lb) is one of the ideal torque wrench choice from Agilent Technology.

B. DC Power Line Connection

Strip the insulation layer at the end of DC power supply wire. The stripped length should be around 0.100" to 0.200". The 24 ~ 26 American Wire Gauge wire is suitable. Wound the stripped wire about 3/4 to 1 turn on the DC feed thru center pin. Solder the wounded wire and the center pin together. Clean the soldering joint by a Q-tip with alcohol to remove the flux and residue.

Do not use large soldering iron tip with more than 750 degree Fahrenheit to solder the wire and feed thru pin. Damage may occur to the feed thru. 0.010" size tip with 750 degree Fahrenheit temperature setting is suitable for the soldering works.

Repeat the process to solder the DC return wire on the ground turret. Higher temperature and larger tip can be used for this ground soldering.

C. Mounting the Amplifier

Use three pieces of #4-40 with longer than 9/16" screws for mounting the amplifier on a metal-based chase. Flat and spring washers are needed to prevent the screw loosening. Always use the appropriate torque setting of the power screwdriver to mount screws.
